

## 4G watch e-WG100

# Quick start guide

Rev. 1.0



**Important**: you must insert the SIM card and first boot the watch before you can connect to <a href="https://www.emerit-console.com">www.emerit-console.com</a> to configure it.

www.magneta.fr 1/9



## **C**ontents

1. Box contents	3
2. Introducing e-WG100 watch	4
3. Charging	5
4. Inserting SIM card	6
5. First boot	7
6. Error notifications and solutions	8
7. First login to Emerit console	9



#### 1. Box contents



e-WG100 watch



Screwdriver



**USB** charger



Spare screws and spare gasket for SIM card slot cap



**USB** cable



Information card

www.magneta.fr 3/9



## 2. Introducing e-WG100 watch










- 1. SIM card slot
- 2. SOS button
- 3. Color control screen
- 4. Power ON/OFF button
- 5. Magnetic charge zone

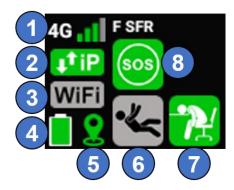

- 1. GSM network information
- 2. IP connection state
- 3. Wifi connection state
- 4. Remaining battery level
- 5. GPS indicator
- 6. Tilt indicator
- 7. No-motion indicator
- 8. SOS button indicator

www.magneta.fr 4/9



## 3. Charging

**Advice**: it is recommended to turn off the watch before charging it to avoid any untimely alarm in the event of poor contact, a cable not connected to the mains or a power failure. Charge the watch after each period of use.

• Charging cycle of a completely empty battery: about 2 hours

#### Using the USB cable

Adjust the watch by matching the magnetic connectors on the back side with those on the USB cable.

Connect the other end of the USB cable to the USB charger and plug the charger into the mains.



## Using the charging station (optional accessory)

Fit the watch by matching the magnetic connectors on the rear face with the one of the docking station.

Connect the end of the USB cable to the USB charger and plug the charger into the mains.



Make sure the charging icon is displayed after a few seconds. It then disappears after 5 seconds. While charging, it is possible to check its progress at any time by briefly pressing the power ON/OFF button.

www.magneta.fr 5/9



### 4. Inserting SIM card

**Important**: the SIM card must have a subscription with the DATA option active in addition to voice and SMS. ① The security of the SIM card must be deactivated (no PIN code) before it is inserted into the watch. PIN code security is deactivated in the Settings / Security menu after inserting the SIM card in a telephone.

• SIM card format: Nano SIM

#### Remove the protection from the SIM card slot

Use the screwdriver supplied with the watch and unscrew the security screw of the SIM card slot protection. Remove the protection by first lifting the end where the screw insertion hole is located.



#### SIM card insertion

Respect the direction of insertion indicated, slight press until the SIM card locks in the slot with the sound of a click



#### Put back SIM card slot protection

Position the guard by first inserting the end opposite the screw hole. Apply enough pressure with your thumb so that the protector is fully seated at both ends.

Use the screwdriver supplied with the watch to tighten the security screw.



www.magneta.fr 6/9



#### 5. First boot

**Advice**: before using the device for the first time, ask your operator for the APN code relating to the SIM card, which is essential for the Internet connection (IP connection). In some cases, it may be necessary to program it manually via an SMS command, see chapter 6.

After charging the watch, remove it from its charging system and then press and hold the power ON/OFF button for at least 2 seconds.

The watch enters its initialization phase during which it checks if a software update is available and downloads it automatically.

Then it restarts and sends its configuration to the server <a href="www.emerit-console.com">www.emerit-console.com</a>

During this initialization phase, the main screen is displayed, the watch vibrates regularly (double short vibrations) and the different phases are indicated by the symbols described opposite.

The initialization phase ends with an incomplete configuration notification associated with long vibrations. This notification is displayed for 1 minute and can be canceled at any time by short pressing on the SOS button.

Once the first boot has been carried out, go to <a href="www.emerit-console.com">www.emerit-console.com</a> to complete the configuration of the watch

4G,    FSFR	Waiting for connection the IP indicator should turn green after a few seconds
4G ,   F SFR	Searching for an update
4G , I F SFR	Downloading the update This step can take several tens of seconds
<b>E</b>	Restart
4G III F SFR	Waiting for connection
4G ,   F SFR	Sending configuration to server www.emerit-console.com
	Incomplete configuration notification
4G , I F SFR  T i P  WIF	The configuration must be completed on www.emerit-console.com

www.magneta.fr 7/9



#### 6. Error notifications and solutions

#### No GSM connection

- a. check that the SIM card is active
- **b.** check that the security by PIN code of the SIM card has been deactivated beforehand

These two checks can be done by inserting the SIM card into a phone.

PIN code security is deactivated in the Settings / Security / SIM card lock menu, after inserting the SIM card in a phone.

#### No IP connection

- a. check with your operator that the subscription associated with the SIM card has the DATA option
- b. the APN code allowing the DATA connection is not known by the watch and it must be programmed manually using the following SMS command:

#### ?CNF 01/01 2505 X Y Z

X: operator name

Y: APN code

Z: roaming international (0 = disable / 1 = enable)

Example: ?CNF 01/01 2505 orange orange-mib 0







## 7. First login to Emerit console

Once the first boot has been carried out, connect to <u>www.emerit-console.com</u> and enter the last 5 digits of the IMEI number and the serial number of the watch.

The numbers can be found on the label on the back of the watch as well as on the box label.

Ente	the 5 la	ast digit	s of IMI	El numb	er
Ente	the 5 la	ast digit	s of ser	ial num	ber (SN)





At the first connection, it is necessary to create a password which will be requested for each new connection to this device.

Saisir un mot de passe de 6 caractères incluant au moins 1 minuscule, 1 majuscule et 1 chiffre, sans caractère spécial. Ce mot de passe sera demandé à chaque connexion à cet appareil.

Confirmer le mot de passe

www.magneta.fr 9/9